

Wet-Dry Vacuum Maintenance

Steps

1. Thoroughly clean the solution tank after each use
2. The float and float cage used to stop vacuum action when maximum recovery is reached should be cleaned after each use.
3. Ensure that the float moves freely before operating.
4. If the float must be removed, it must be re-installed correctly. On most machines this means that the open end faces down.
5. Use the appropriate filter per cleaning task. Usually this means a paper filter for dry vacuuming and a cloth filter for wet vacuuming.
6. Clean the paper filter bag after each use by shaking the filter to remove loose particles; with a cloth filter, rinse clean but never wash the filter, this can cause shrinkage.
7. If foam develops in the machine, it must be reduced using a chemical de-foamer.
8. Never store the machine with liquid inside the tank. Run the machine empty for about five minutes to remove all moisture from the tank, hoses, and attachments.
9. If removing the motor head, be careful and place it down gently on a clean, dry surface.
10. Keep all operating instructions on hand for future reference.